Commissioning

Entering the operator code

Press the following keys:

1. **Hauptmenü:**" will be displayed.

	Hauptmenü:	
	 Messwerte 	
	Meldungen	
	Solar	
Ein 40		

Fig. 13

2. 🗸

Hauptmenü:
SD-Karte
Manuellbetrieb
► Bedienercode
Fig. 14

for "Bedienercode" (lowest menu point)

Language selection

Press the following keys:

- 1. : "Hauptmenü:" will be displayed.
 - Hauptmenü: ► Messwerte Meldungen Solar Fig. 16
- 2. ▼ for "Experte" (lowest menu point)
 - Hauptmenü: Manuellbetrieb Bedienercode ►Experte *Fig. 17*
- Setting the time and date

Main menu "System"

- "Sys. setting:"
 - "Time"
 - First set the hour, then the minutes.
 - "Date"

Set the year, month and day in that order.

3. OK to confirm



4. 🍗 / 🗨	for "0200"
	Confirm every figure with OK .
	Key sequence: OK/ > / >/ OK/ OK/ OK

Note

After commissioning set the operator code to "0000".

- 3. OK to confirm
- 4. ▼ for "Sprache" (lowest menu point)
 - Experte: Uhr Display ▶ Sprache *Fig. 18*
- 5. OK to confirm
- **6.** \land / \lor for the required language
- 7. OK to confirm

5516 519 GB

For further time adjustments, see page 73.